

## Active AT85C51SND3Bx Errata List

- I/O Ports – P0, P2, P4, P5 Read-Modify-Write
- SIO Interface – Low Baudrate Data Reception Ready Report
- SPI Interface – DFC Usage Limitation
- Battery Monitor – Bad Conversion Linearity
- ISP – ISP Entry When Blanked Nand Flash
- ISP – ISP USB enumeration on Windows™ XP

## AT85C51SND3Bx Errata History

Lot Number	Errata List
All	1, 2, 3, 4, 5, 6

## AT85C51SND3Bx Errata Description

### 1. I/O Ports – P0, P2, P4, P5 Read-Modify-Write

The P0, P2, P4, P5 implementation may lead to Input lock-up when using read-modify-write (RMW) instructions:

- ANL (logical AND, e.g., ANL P2,A)
- ORL (logical OR, e.g., ORL P2,A)
- XRL (logical EX-OR, e.g., XRL P2,A)
- JBC (jump if bit set and clear bit, e.g., JBC P2.1, LABEL)
- CPL (complement bit, e.g., CPL P2.0)
- INC (increment, e.g., INC P2)
- DEC (decrement, e.g., DEC P2)
- DJNZ (decrement and jump if not zero, e.g., DJNZ P2, LABEL)
- MOV PX.Y,C (move carry bit to bit Y of Port X)
- CLR PX.Y (clear bit Y of Port X)
- SETB PX.Y (set bit Y of Port X)

Here is a normal I/O port RMW execution sequence:

- Read the I/O port SFR (latch)
- Modify the data
- Write back the modified data to port SFR

Now here is what is really executed, these instructions that should read the internal latch read in fact the port data:

- Read the I/O port data
- Modify the data
- Write back the modified data to port SFR


Here is a detailed example:

P0.0 is used as input (set low by external hardware) while other P0 I/O are used as output.

Following code may set P0.1 and leave other bits unaffected:

```
setb P0.1;
```

- before executing, P0 SFR= 1111 1101; P0 port= 1111 1100

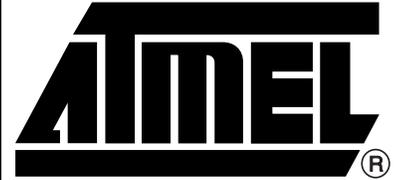

**MP3**  
**Microcontrollers**

**AT85C51SND3Bx**

**Errata Sheet**

7656A-MP3-04/07



- after executing, P0 SFR= 1111 1110; P0 port= 1111 1110  
Now P0.0 is no more programmed as input. The latch content is set to 0 meaning the port is internally driven to low level like for an output.

#### **Workaround**

To avoid any conflict with port inputs, put all application inputs on same port. If this is not possible, avoid using RMW instructions and rebuild such instruction by software by taking care to set the Port SFR bit to 1 when writing back to SFR.

### **2. SIO Interface – Low Baudrate Data Reception Ready Report**

RI flag reset time too long after reading data into the reception FIFO. This may report bad data reception and lead to double read of received characters.

This errata depends on the CPU frequency and the treatment done on the received character, it appears using polling mode and using low baudrate values.

#### **Workaround**

The goal of the workaround is to leave enough time to the RI flag to be reset to forbid a bad reception (RI=1) detection. Two workarounds are proposed:

- Limit the baudrate to high values, e.g. > 50Kbaud with Fosc= 12MHz, X2 mode and 12x oversampling factor.
- Add a delay between two reads of a character.

### **3. SPI Interface – DFC Usage Limitation**

DFC transfers to SPI do not operate properly when DFC is clocked by PLL.

#### **Workaround**

Use DFC transfer only with DFC clocked by oscillator.

### **4. Battery Monitor – Bad Conversion Linearity**

Battery monitor reports bad linearity data.

#### **Workaround**

Use the VB4:0 value as threshold voltage conversion only, do not use it for full range voltage conversion.

### **5. ISP – ISP Entry When Blanked Nand Flash**

The ISP mode is not automatically started when first powered-up with new blanked Nand Flash. This case specially appears when in production.

#### **Workaround**

Use a key of the keyboard matrix to force ISP entry at power-up. This is achieved by connecting any column signal to ISP pin. Then pressing the key connected to this column and to ROW 0 will assert the ISP pin.

Note that this workaround forbids debug mode as  $\overline{\text{ISP}}$  pin is also the OCDT pin. Solution is to add a 0  $\Omega$  resistor in order to insulate the OCDT pin from the keypad during debugging.

For an example on how to apply the workaround, refer to the at85rfd-07 schematic.

## 6. ISP – ISP USB enumeration on Windows™ XP

When connecting the device to windows XP, an informational pop-up is opened near the status bar:



This is a windows dummy message since ISP is done in full speed mode.

### **Workaround**

None. Do not take care of this pop-up.



## Atmel Corporation

2325 Orchard Parkway  
San Jose, CA 95131, USA  
Tel: 1(408) 441-0311  
Fax: 1(408) 487-2600

## Regional Headquarters

### Europe

Atmel Sarl  
Route des Arsenalux 41  
Case Postale 80  
CH-1705 Fribourg  
Switzerland  
Tel: (41) 26-426-5555  
Fax: (41) 26-426-5500

### Asia

Room 1219  
Chinachem Golden Plaza  
77 Mody Road Tsimshatsui  
East Kowloon  
Hong Kong  
Tel: (852) 2721-9778  
Fax: (852) 2722-1369

### Japan

9F, Tonetsu Shinkawa Bldg.  
1-24-8 Shinkawa  
Chuo-ku, Tokyo 104-0033  
Japan  
Tel: (81) 3-3523-3551  
Fax: (81) 3-3523-7581

## Atmel Operations

### Memory

2325 Orchard Parkway  
San Jose, CA 95131, USA  
Tel: 1(408) 441-0311  
Fax: 1(408) 436-4314

### Microcontrollers

2325 Orchard Parkway  
San Jose, CA 95131, USA  
Tel: 1(408) 441-0311  
Fax: 1(408) 436-4314

La Chantrerie  
BP 70602  
44306 Nantes Cedex 3, France  
Tel: (33) 2-40-18-18-18  
Fax: (33) 2-40-18-19-60

### ASIC/ASSP/Smart Cards

Zone Industrielle  
13106 Rousset Cedex, France  
Tel: (33) 4-42-53-60-00  
Fax: (33) 4-42-53-60-01

1150 East Cheyenne Mtn. Blvd.  
Colorado Springs, CO 80906, USA  
Tel: 1(719) 576-3300  
Fax: 1(719) 540-1759

Scottish Enterprise Technology Park  
Maxwell Building  
East Kilbride G75 0QR, Scotland  
Tel: (44) 1355-803-000  
Fax: (44) 1355-242-743

### RF/Automotive

Theresienstrasse 2  
Postfach 3535  
74025 Heilbronn, Germany  
Tel: (49) 71-31-67-0  
Fax: (49) 71-31-67-2340

1150 East Cheyenne Mtn. Blvd.  
Colorado Springs, CO 80906, USA  
Tel: 1(719) 576-3300  
Fax: 1(719) 540-1759

### Biometrics/Imaging/Hi-Rel MPU/ High Speed Converters/RF Datacom

Avenue de Rochepleine  
BP 123  
38521 Saint-Egreve Cedex, France  
Tel: (33) 4-76-58-30-00  
Fax: (33) 4-76-58-34-80

---

### Literature Requests

[www.atmel.com/literature](http://www.atmel.com/literature)

**Disclaimer:** Atmel Corporation makes no warranty for the use of its products, other than those expressly contained in the Company's standard warranty which is detailed in Atmel's Terms and Conditions located on the Company's web site. The Company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of Atmel are granted by the Company in connection with the sale of Atmel products, expressly or by implication. Atmel's products are not authorized for use as critical components in life support devices or systems.

© 2007 Atmel Corporation. All rights reserved. Atmel®, logo and combinations thereof, Everywhere You Are® and others are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.



Printed on recycled paper.

7656A-MP3-04/07